HOW TO USE THIS MANUAL

This service manual describes the service procedures for the TRX400 FOURTRAX.

Follow the Maintenance Schedule (Section 3) recommendations to ensure that the vehicle is in peak operating condition.

Performing the first scheduled maintenance is very important. It compensates for the initial wear that occurs during the break-in period.

Sections 1 and 3 apply to the whole vehicle. Section 2 illustrates procedures for removal/installation of components that may be required to perform service described in the following sections. Section 4 through 21 describe parts of the vehicle, grouped according to location.

Find the section you want on this page, then turn to the table of contents on the first page of the section.

Most sections start with an assembly or system illustration, service information and troubleshooting for the section. The subsequent pages give detailed procedure.

If you are not familiar with this motorcycle, read Technical Feature in section 22.

If you don't know the source of the trouble, go to section 23 Troubleshooting.

CONTENTS

| | GENERAL INFORMATION | 1 |
|------------------------|----------------------------------|----|
| | FRAME/BODY PANELS/EXHAUST SYSTEM | 2 |
| | MAINTENANCE | 3 |
| ENGINE AND DRIVE TRAIN | LUBRICATION SYSTEM | 4 |
| | FUEL SYSTEM | 5 |
| | ENGINE REMOVAL/INSTALLATION | 6 |
| | CYLINDER HEAD/CYLINDER/PISTON | 7 |
| | СLUТСН | 8 |
| | GEARSHIFT LINKAGE | 9 |
| | ALTERNATOR/STARTER CLUTCH | 10 |
| | CRANKSHAFT/BALANCER/TRANSMISSION | 11 |
| CHASSIS | FRONT WHEEL/SUSPENSION/STEERING | 12 |
| | REAR WHEEL/SUSPENSION | 13 |
| | BRAKE SYSTEM | 14 |
| | FRONT DRIVING MECHANISM | 15 |
| | REAR DRIVING MECHANISM | 16 |
| ELECTRICAL | BATTERY/CHARGING SYSTEM | 17 |
| | IGNITION SYSTEM | 18 |
| | ELECTRIC STARTER | 19 |
| | LIGHTS/SWITCHES | 20 |
| | WIRING DIAGRAM | 21 |
| | TECHNICAL FEATURE | 22 |
| | TROUBLESHOOTING | 23 |
| | INDEX | 24 |