

Quick Reference Guide

General Information	1	
Fuel System	2	
Engine Lubrication System	3	
Exhaust System	4	
Engine Top End	5	
Engine Removal and Installation	6	
Engine Bottom End	7	
Cooling and Bilge Systems	8	
Drive System	9	
Pump and Impeller	10	
Steering	11	
Hull/Engine Hood	12	
Electrical System	13	
Storage	14	
Appendix	15	
Supplement - 1997 ~ 1999 Models	16	
Supplement - 2000 ~ 2002 Models	17	

This quick reference guide will assist you in locating a desired topic or procedure.

- Bend the pages back to match the black tab of the desired chapter number with the black tab on the edge at each table of contents page.
- Refer to the sectional table of contents for the exact pages to locate the specific topic required.