

Internal assemblies

Transfer roller

- 1 Remove the following assemblies:
 - Toner cartridge and media tray. See “Toner cartridge” on page 15 through “Media tray” on page 16.
- 2 Use needle-nose pliers to gently squeeze the two small tabs on the transfer roller.
- 3 Lift the transfer roller up, slide it to the right, and lift it out of the printer.

CAUTION

Skin oils can damage the transfer roller sponge. Do not touch the black transfer roller sponge.

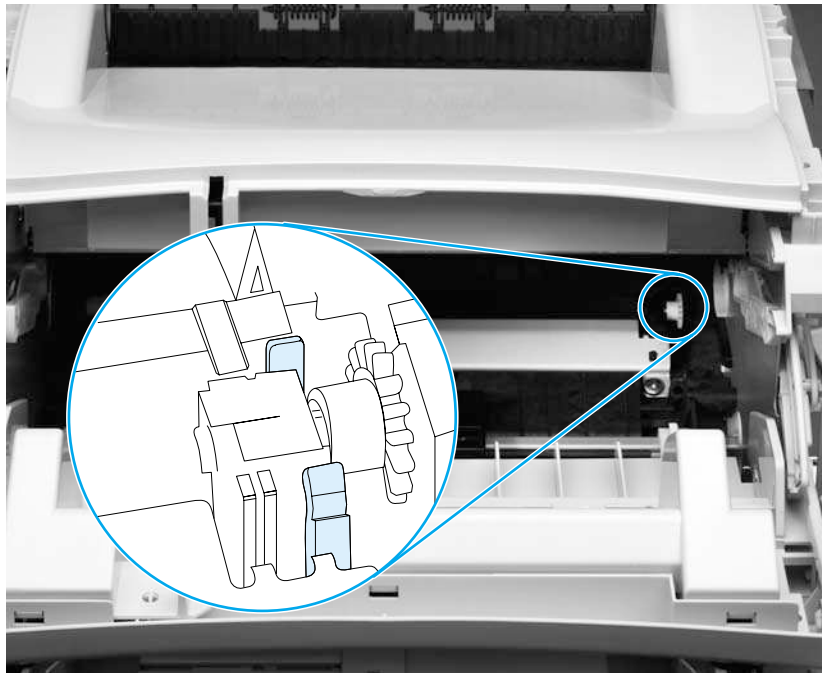


Figure 28. Remove the transfer roller

Hint

Do not misplace the small grounding spring that is underneath the right side of the transfer roller.